
 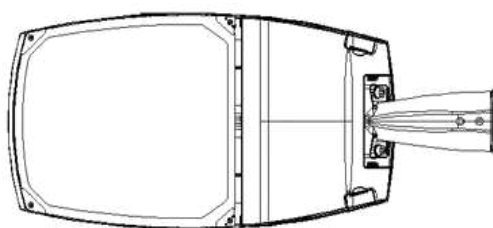


STR 2

Installation instructions




Model	Input Voltage
STR2 N1	220~240 V 50-60 Hz
STR2 N2	220~240 V 50-60 Hz
STR2 N3	220~240 V 50-60 Hz

Connection of luminaires to the network may only be performed by persons with appropriate qualifications!




RoHS

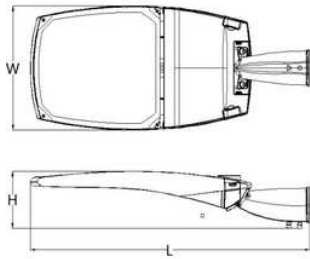


Name	L	W	H	Weight
STR2 N1	555 mm	210 mm	143 mm	3,25 kg
STR2 N2	645 mm	257mm	147 mm	4,8 kg
STR2 N3	790 mm	305mm	147 mm	7,4 kg

1

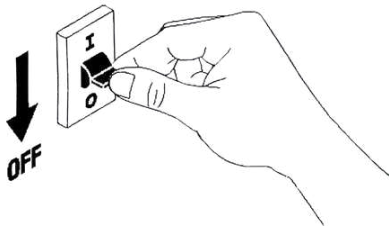

2

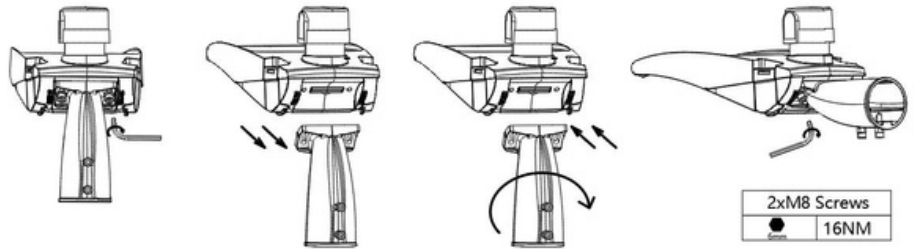


3



Brown L
Blue N
Yellow-Green PE

5

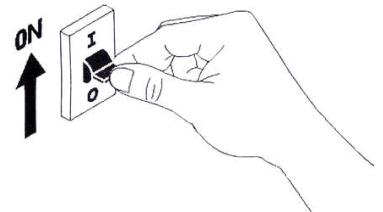

1. Turn off the power.
2. Adjust the way the luminaire is attached to the pole (vertical or horizontal). The tightening torque of the screws is 12~16Nm.
3. Making the connection does not require opening the luminaire housing. Connect the power supply 230V AC/50Hz:
 - Route the power cable 3x0.75 mm² - 3x2.5 mm² (cable diameter: 4-8 mm).
4. Slide the luminaire onto the lighting pole and tighten the two screws (20 Nm).
5. Turn on the power.

Final Provisions:

- The luminaires may only be connected to the mains by persons with appropriate qualifications and authorizations;
- The manufacturer does not recommend and is not responsible for defects resulting from any activities inside the luminaire;
- The manufacturer is not liable for defects resulting from non-compliance with the recommendations of this manual or incorrect connection of the device to the mains;
- The manufacturer reserves the right to change the design and parameters of the product;
- Recommended installation height 3 -15 m;
- **CAUTION - Do not stare into the light beam of the LED(s)!**
- **WARNING - Risk of electric shock!**

ATTENTION! Failure to connect the PE wire may cause electric shock!

