


STR 2

Installation instructions

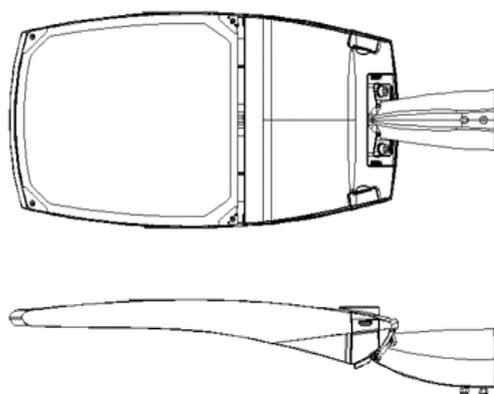


| Model | Power | Input Voltage | Luminous flux | CCT | CRI |
|----------|----------|----------------------|-------------------|--------|-----|
| STR 2 N1 | 10-40 W | 220~240V 50-60 Hz | 1 600 – 6 400 lm | 4000 K | >70 |
| STR 2 N2 | 40-60 W | 220~240V 50-60 Hz | 6 400 – 9 600 lm | 4000 K | >70 |
| STR 2 N3 | 60-100 W | 220~240V 50-60 Hz | 9 600 – 16 000 lm | 4000 K | >70 |

Connection of luminaires to the network may only be performed by persons with appropriate qualifications!




RoHS

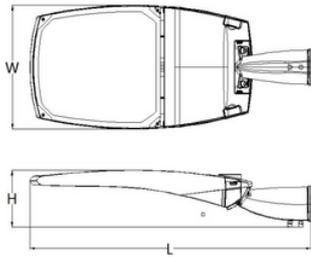


| Name | L | W | H | Weight |
|----------|--------|--------|--------|--------|
| STR 2 N1 | 555 mm | 210 mm | 143 mm | 3,4 kg |
| STR 2 N2 | 645 mm | 257mm | 147 mm | 4 kg |
| STR 2 N3 | 645 mm | 257mm | 147 mm | 4 kg |

1

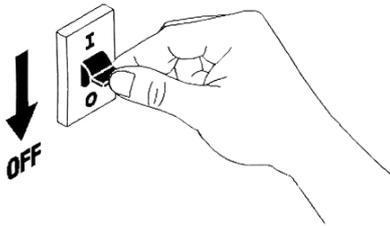

2

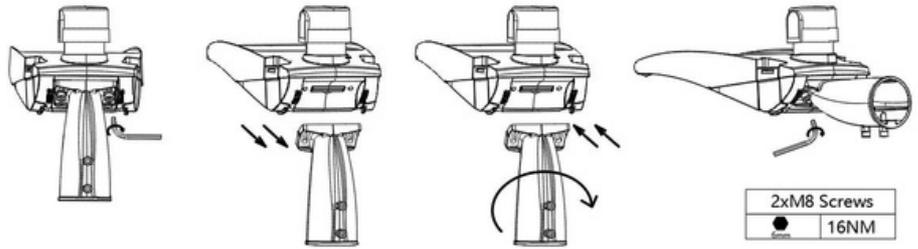


3



Brown L
Blue N
Yellow-Green PE

5

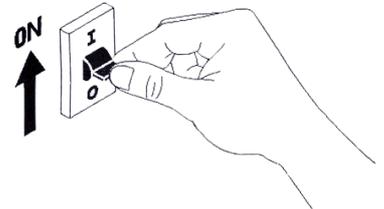

1. Turn off the power.
2. Adjust the way the luminaire is attached to the pole (vertical or horizontal). The tightening torque of the screws is 12~16Nm.
3. Making the connection does not require opening the luminaire housing. Connect the power supply 230V AC/50Hz:
 - Route the power cable 3x0.75 mm² - 3x2.5 mm² (cable diameter: 4-8 mm).
4. Slide the luminaire onto the lighting pole and tighten the two screws (20 Nm).
5. Turn on the power.

Final Provisions:

- The luminaires may only be connected to the mains by persons with appropriate qualifications and authorizations;
- The manufacturer does not recommend and is not responsible for defects resulting from any activities inside the luminaire;
- The manufacturer is not liable for defects resulting from non-compliance with the recommendations of this manual or incorrect connection of the device to the mains;
- The manufacturer reserves the right to change the design and parameters of the product;
- **CAUTION - Do not stare into the light beam of the LED(s)!**
- **WARNING - Risk of electric shock!**

ATTENTION! Failure to connect the PE wire may cause electric shock!

